Scrubmaster B3





OPERATION

- 1. Disconnect charger cable from the outlet and the battery. Attach the battery to the machine 1.
- 2. Fill the clear water tank from opening 2.(tank volume 3 I)
- 3. Release the handle by lifting handle lock 3 up. (Hold on the handle!)
- 4. Lift lever 5 up to lower the squeegee 4
- 5. Turn the machine on by button 6. Switch on the suction motor by using button 7 and brushmotor by using button 8. (you can adjust the brushspeed with buttons 8 and 9)
- Actuate the water by using button 10. (you can adjust the amount of water with buttons 10 and 11)
 NOTE! When the brushes starts, the machine starts moving, if you want to stop the machine and brush rotation, press button 9
- 7. After use, lock the handle by pressing handle lock 3 down and lift up the squeegee.

NOTE! Make sure that pads / brushes are installed!!!

Qualified persons only are authorised to operate the machine!

The machine is not designed for coarse material! Floor area sweeping before!


Use only cleaning agents suitable for automatic machines (low-foaming)!

Please pay attention to the informations in the instruction manua!

Scrubmaster B3





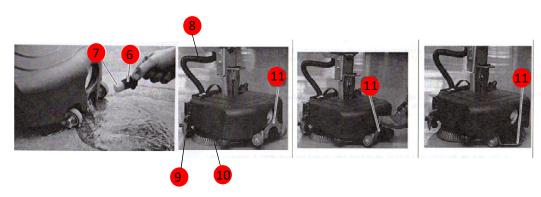

MAINTENANCE AND CARE:

Daily maintenance:

- ➤ Remove the soiled water tank 1 by opening the clips 2 on both sides. Empty the soiled water tank by opening the plug 3 on the bottom of the tank, rinse/clean the tank.
- ➤ Remove and clean the soiled water tank suction hose 4
- Remove, clean and dry the suction filter 5
- ➤ Reconnect the suction hose 4 to the tank.

 NOTE! The end of the white tube must point down!

 Reconnect the plug 3 to the tank bottom and put the tank back to the machine
- ➤ Empty the clear water tank by opening the cap 6 on the front of the tank. The clear water filter 7 is attached to the cap, check and clean it.
- > Remove the suction hose 8 and rinse it
- Clean the squeegee 9
- ➤ Remove the battery from the machine, connect it to the charger and connect the charger to outlet. Check the chargers operation lights.

- ➤ Tilt the machine on the front wheels, remove brushes/pads 10 and clean them and check for wearing
- ➤ Press/tilt the lever 11 under the machine to place the machine in resting position.

Weekly maintenance:

- > Clean the machine from outside
- ➤ Check squeegee sealing strips and turn or replace them if necessary

Cleaning result is bad:

o suction hose 8 or squeegee 9 is blocked.

Turn off the machine before maintenance!

Please pay attention to the informations in the instruction manual!