

OPERATION


1. Turn off the charger. Disconnect the battery plug from the charger and connect it to the machine **1**.
2. Fill the clear water tank from opening **2** (max 50° C). Multifunction display (MFD) **3** shows the water level at 20% intervals.
3. Switch the machine on by the key switch **4** and actuate driving direction from button **5**.
4. Press green button **6** to lower brush head **7** and squeegee **8**, suction turbine switches on.
5. Press pedal **9**, machine moves and brush head drive switches on. Use knob **11** to adjust the water level in MFD **10** (if necessary)

NOTE! Make sure that pads/brushes are installed!

Installing the brushes: Place the brushes under the brush head in the correct positions, sit on the bench and use knob **11** in MFD to select the brush attachment icon **12** and press the knob, press the knob again to confirm selection **13**. Wait until the brushes are engaged **14**

Qualified persons only are authorised to operate the machine!

The machine is not designed for coarse material! Sweep the floor first!
Use only cleaning agents suitable for automatic machines! (low foaming)

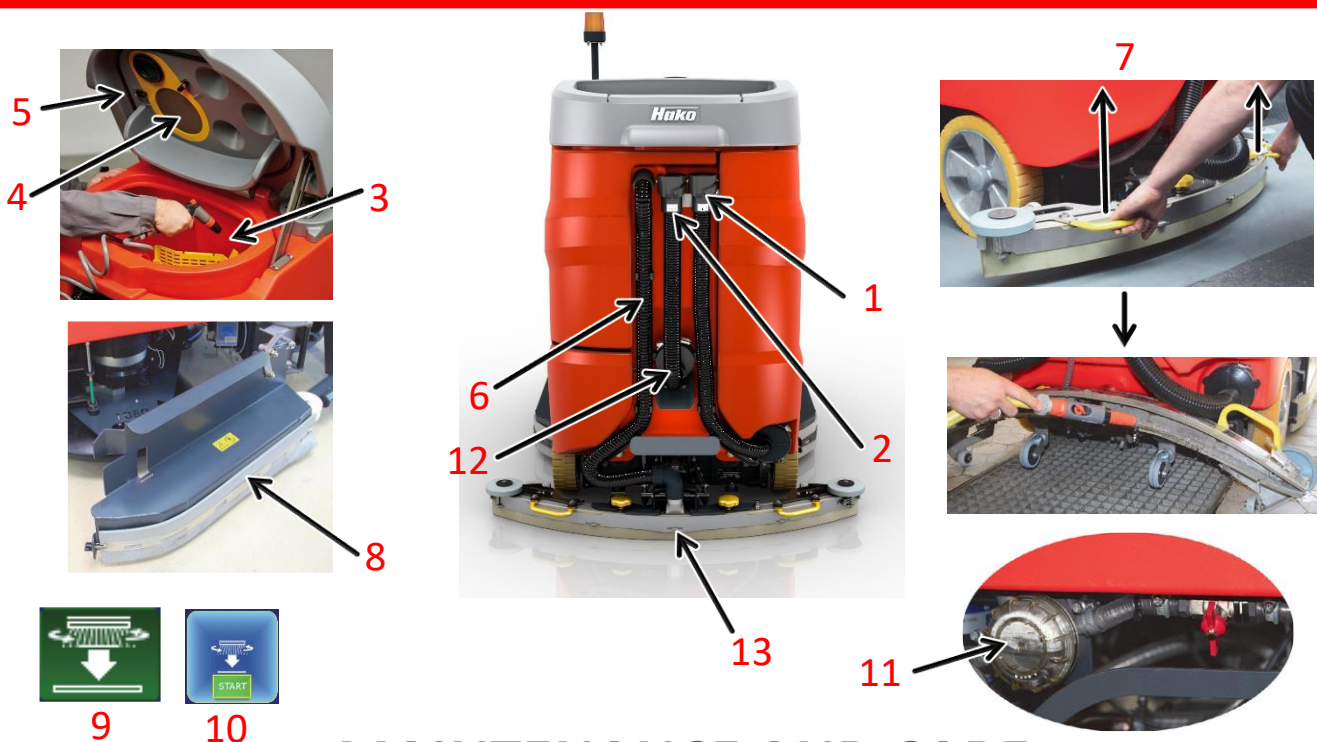

MAINTENANCE AND CARE:

Daily maintenance:

- Empty clear water tank from hose 1
- Empty soiled water tank from hose 2 and clean soiled water tank 3.
- Check suction filter 4 and take off and clean it if necessary. Clean lid sealing 5
- Remove suction hose 6 and clean it
- Turn the squeegee 7 by grabbing the yellow handles with both hands and pull the squeegee upwards with a single pull, the swivel mechanism is released, rotate the squeegee 90° or remove squeegee and clean it, check sealing strips.
- Lift up and open the wipers 8 and remove brushes / pads selecting the brush removal icon 9 on the MFD with the knob and press the knob. Accept the selection 10 by pressing the knob again and clean brushes/pads and check them for wearing.
- Remove the battery plug from the machine and connect it to the charger. Switch on the charger.

Weekly maintenance:

- Check and clean brush head and wipers sealing strips 8 and turn them or replace them if necessary.
- Clean the machine from outside
- Open and check clear water filter 11
- Clear water tank thorough emptying/maintenance from opening 12
- Check squeegees sealing strips 13 and turn or replace the if necessary
- check the acid level of the battery, BATTERYwater must be refilled if necessary. NOTE! Always after charging.

Suction result is bad:

- suction filter 4, suction hose 6 or squeegee 13 is blocked.
- Locking cap of soiled water drain hose 2 is open.
- Tank lid sealing 5 is defect or tank lid is open

Turn off the machine before maintenance!

Please pay attention to the informations in the instruction manual, you can find manual by reading QR-code.

