

Hako Sweepmaster B650





Operation

1. Disconnect charger's plug from outlet and place it in its box **1**.
2. Switch on the machine by key **2**. Brushes start.
3. Lower the side brush from lever **3** if needed.
4. Pull the bail **4** to the handle. The machine moves.
ATTENTION! If the sweeping surface is wet, skip the suction function by opening the flap **5**.

Maintenance after use

- Clean the filter by using shaking device **6** in and out several times.
- If the filter is very dirty, use a separate key to open the machine's covers lock **7** and lift up the cover. Open the holders of filter cover **8**. Take off the filter and clean it with vacuum cleaner or dropping it evenly to the floor few times dirty side facing down.
- Take off and empty container **9** by opening the container's lock by pushing lever **10** to the right and at the same time lower the container by pushing the handle **11** forward.
- Charge battery

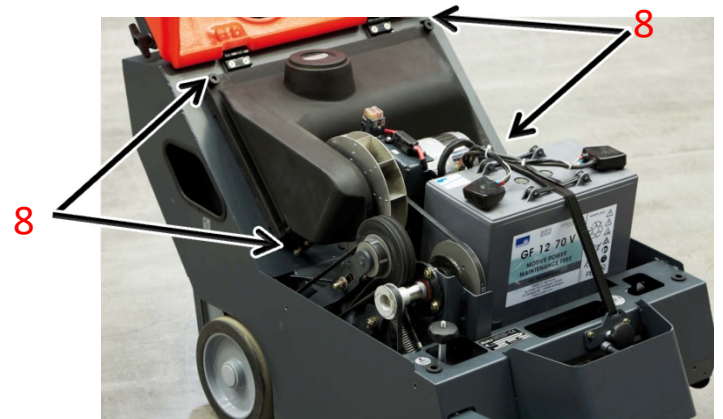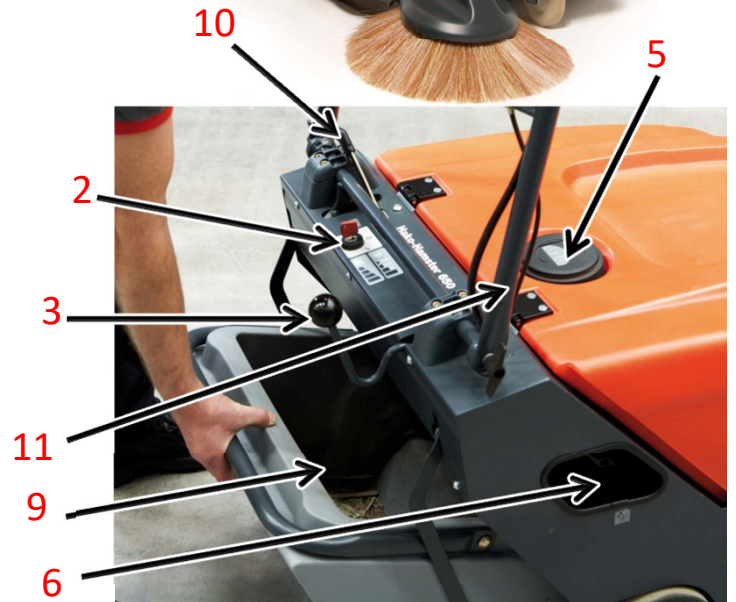

Qualified persons only are authorised to operate the machine!

Refer to the operating instructions for further details on proper use!