






## OPERATION:

1. Unplug the charging cable and put it in its box **1**.
2. Fill the clear water tank **3** after folding up the opening **2**. The blue light next to the opening will turn on when the tank is full.
3. Adjust the height of the handle with lever **4**.
4. Lower the squeegee with pedal **5**.
5. Press button **6** to turn on the machine.
6. Press button **6** again to turn on the brushmotor (icon  on the display), vacuum motor from button **7** (icon  on the display) and water from button **8** (icon  on the display).
7. Use the lever **9** to start the brush and suction motor.
8. Move on. Use button **8** to adjust the water and button **7** to adjust the suction power (if necessary).


Note! Make sure that pad/brush is installed!!

**Qualified persons only are authorised to operate the machine!**

The machine is not designed for coarse material! Floor area sweeping before!


Use only cleaning agents suitable for automatic machines (low-foaming)!

Please pay attention to the informations in the instruction manual!

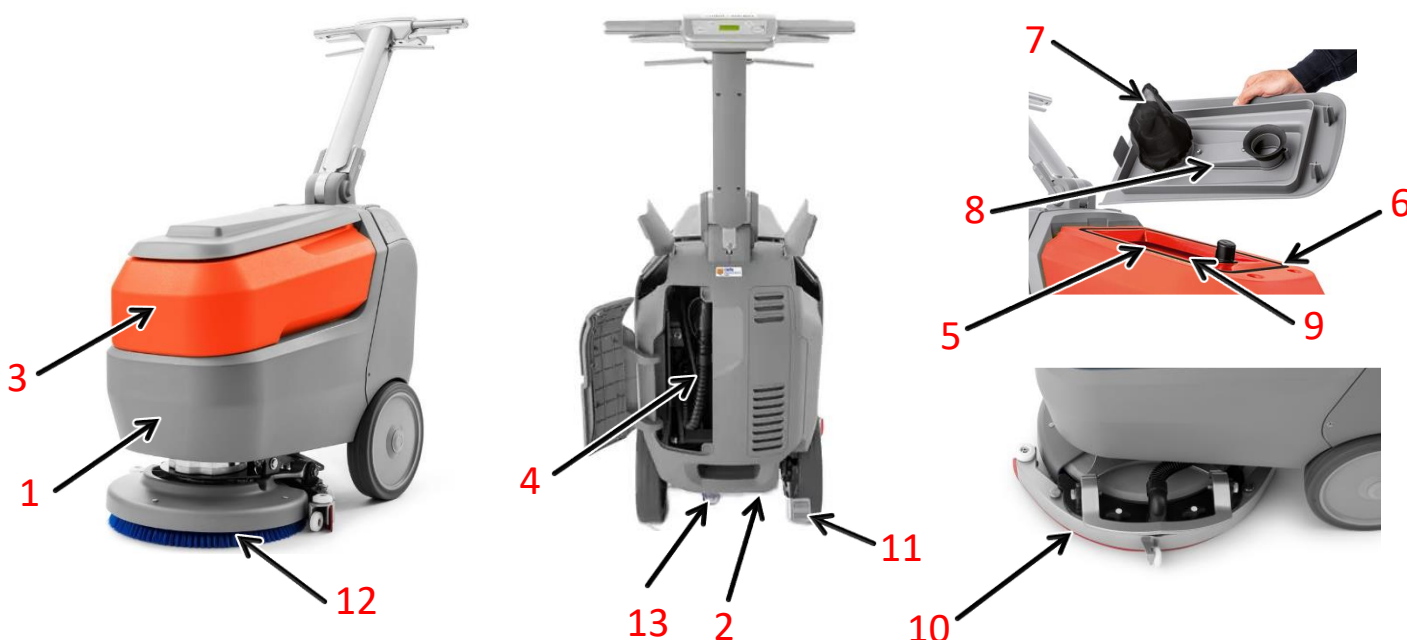

## MAINTENANCE AND CARE

### Daily maintenance:

- Empty the clear water tank **1** from the valve **2**.
- Empty soiled water tank **3** from hose **4** and clean soiled water tank **5**. Clean lid sealing **6**.
- Check and if necessary clean the float and float filter **7** and soiled water tank lid **8**.
- Place the machine on the floor drain and rinse the suction tube/suction hose from the **red** tube **9** inside the tank.
- Lower the squeegee **10** with pedal **11**, rotate the squeegee to the side of the machine, remove the squeegee and clean it.
- With the brush head raised, press for 2 sec. the brush release button , brush/pad falls to the floor, check it for wearing and clean it.
- Charge battery (take the cable from its box, connect it to the machine and then to the socket)

### Weekly maintenance:

- Check and clean brush head **12**.
- Check and clean clear water filter **13**.
- Clean the machine from outside.
- Check squeegee **10** sealing strips and turn or replace them if necessary.

### Suction result is bad:

- Suction hose or squeegee **10** is blocked.
- Locking cap of the soiled water hose **4** is open.
- Tank lid sealing **6** of the soiled water tank is defected or tank lid **8** is open.

Turn off the machine before maintenance!

Please pay attention to the informations in the instruction manual, you can find manual by reading QR-code.

