






OPERATION:

1. Unplug the charging cable and put it in its box **1**.
2. Fill the clear water tank **3** after folding up the opening **2**. The blue light next to the opening will turn on when the tank is full.
3. Adjust the height of the handle with lever **4**.
4. Lower the squeegee with pedal **5**.
5. Press button **6** to turn on the machine.
6. Press button **6** again to turn on the brushmotor (icon  on the display), vacuum motor from button **7** (icon  on the display) and water from button **8** (icon  on the display).
7. Use the lever **9** to start the brush and suction motor.
8. Move on. Use button **8** to adjust the water and button **7** to adjust the suction power (if necessary).


Note! Make sure that pad/brush is installed!!

Qualified persons only are authorised to operate the machine!

The machine is not designed for coarse material! Floor area sweeping before!


Use only cleaning agents suitable for automatic machines (low-foaming)!

Please pay attention to the informations in the instruction manual!

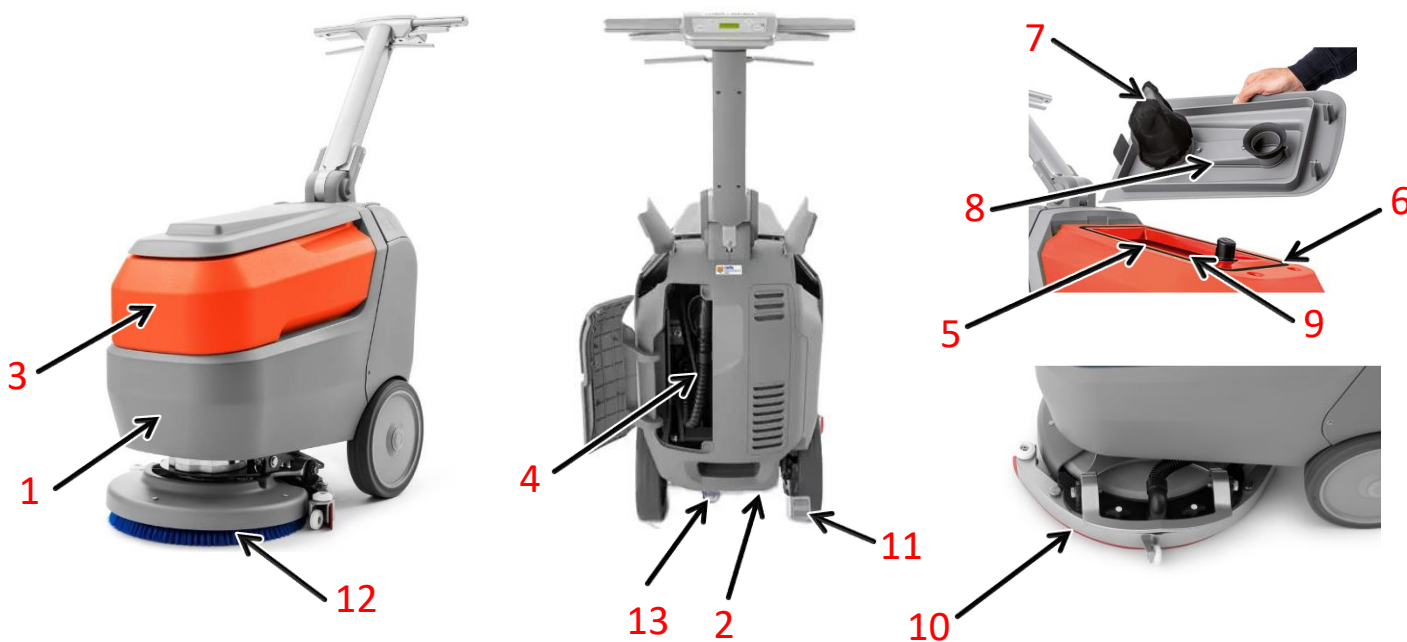

MAINTENANCE AND CARE

Daily maintenance:

- Empty the clear water tank **1** from the valve **2**.
- Empty soiled water tank **3** from hose **4** and clean soiled water tank **5**. Clean lid sealing **6**.
- Check and if necessary clean the float and float filter **7** and soiled water tank lid **8**.
- Place the machine on the floor drain and rinse the suction tube/suction hose from the **red** tube **9** inside the tank.
- Lower the squeegee **10** with pedal **11**, rotate the squeegee to the side of the machine, remove the squeegee and clean it.
- With the brush head raised, press for 2 sec. the brush release button , brush/pad falls to the floor, check it for wearing and clean it.
- Charge battery (take the cable from its box, connect it to the machine and then to the socket)

Weekly maintenance:

- Check and clean brush head **12**.
- Check and clean clear water filter **13**.
- Clean the machine from outside.
- Check squeegee **10** sealing strips and turn or replace them if necessary.

Suction result is bad:

- Suction hose or squeegee **10** is blocked.
- Locking cap of the soiled water hose **4** is open.
- Tank lid sealing **6** of the soiled water tank is defected or tank lid **8** is open.

Turn off the machine before maintenance!

Please pay attention to the informations in the instruction manual, you can find manual by reading QR-code.